

Eberspächer Single Controller for Heat and A/C

User Instructions

This vehicle is equipped with an Eberspächer Airtronic Heater and Air Conditioning system.

The controller will not allow both heating and air conditioning to operate at the same time.



The temperature readout on the controller shows the internal vehicle temperature. To find the 'Heater Set Temperature' press F1, this will then flash showing your set temperature.

Only when the 'Set Temperature' flashes can the temperature be changed.

This is done using the two arrowed Up and Down keys.

When you have set the required temperature the display will continue to flash for a few seconds and then reset to show the inside vehicle temperature.

To set A/C temperature press F2, and then as above.

Eberspächer Single Controller for Heat and A/C

User Instructions



30°C Switch to 2nd Fan Speed

23°C A/C On as Temperature Rises

20°C F2 Set Temperature A/C Off

Note: You cannot overlap F1 and F2 Temperatures



20°C F1 Set Temperature Heater Off

18°C Heater On

Example: Set Temperature F1 20°C, the controller will switch on the Heating if it is 18 degrees or less, and switch off the heater when vehicle temperature reaches 20°C.

Set Temperature F2, Air Conditioning will switch on at 23°C and off again at 20°C.

The internal settings can not be changed by the Driver, so the heater will always start at Set Temperature -2°C and switch off at Set Temperature.

Air Conditioning will run at Set Temperature +3°C and turn off again at Set Temperature.



Eberspächer



Eberspächer (UK) Ltd. Vehicle Air Conditioning & Refrigeration Division
Headlands Business Park, Salisbury Road, Ringwood, Hampshire, BH24 3PB
Tel: +44 (0) 1425 480151 – Fax: +44 (0) 1425 482721
Email: enquiries@eberspacher.com – Website: www.eberspacher.com